



HM-Series Quick Start Guide



Power Button – The HM-Series camera has 3 power modes: On, Off, and Standby.

- On Takes approximately 90 seconds (during bootup there is a fast-flashing red LED on the eyepiece display).
- Standby After the camera is on, pressing the Power button will toggle the camera between On and Standby mode. (In Standby there is a slow-flashing red LED on the eyepiece display).
- Off Push and hold the power button for 8 sec. to turn off.

Capture Button – Some models only; take snapshots (press and release) or video clips (press and hold) to the SD memory card.

Display Brightness - Toggle through five brightness settings.

White/Black Hot/Marine Red - In White Hot, hotter items appear as white or light grey. In Black Hot, hotter items appear as black or dark grey. In Marine Red, only shades of red are used to help maintain night vision.

2× Zoom -Some models only; causes the image to zoom to 2X.

Diopter Control – Adjust the diopter setting for the sharpest image in the viewfinder.

This document is controlled to FLIR Technology Level EAR 1. The information contained in this document is proprietary and/or restricted and pertains to a dual use product controlled for export by the Export Administration Regulations [EAR]. This document and data disclosed herein or herewith is not to be reproduced, used, or disclosed in whole or in part to anyone without the written permission of FLIR Systems, Inc. Diversion contrary to US law is prohibited. US Department of Commerce authorization is not required prior to export or transfer to foreign persons, parties, or uses otherwise prohibited.



HM-Series Quick Start Guide

Installing the Batteries and SD Card

The batteries must be installed and charged before using your camera. Install your SD card.

- Remove the small SD card door. No tools are required.
- 2. Install the SD card.







- 3. Loosen the four captive screws securing the battery cover.
- 4. Remove the battery cover by grasping the front edge where the SD card door was removed.
- 5. Install the batteries as shown.
- 6. Snap the SD card door back into place and reinstall the battery cover—it only fits one way.

Solid

Charging the Camera

The batteries in the camera must be charged prior to their first use.

- 1. Connect the Hot Shoe to your camera.
- 2. Ensure that the plug is fully seated in the Hot Shoe.

When charging correctly, the charging indicator will be lit yellow and will blink green for one second within about 35 seconds.

The charging indicator will continue to blink at decreasing intervals until the batteries are fully charged.

When fully charged, the charging indicator will be lit solid green. The initial charge time is approximately 4 hours.





Flir HM-224 HM 224 Pro Thermal Night Vision Infrared Camera Maritime
Flir HM-307 HM 307 XP Thermal Night Vision Infrared Camera Maritime
Flir HM-307 HM 307 XP+ Thermal Night Vision Infrared Camera Maritime
Flir HM-324 HM 324 XP+ Thermal Night Vision Infrared Camera Maritime
Flir HM-324 HM 324 XP+ Thermal Night Vision Infrared Camera Maritime